
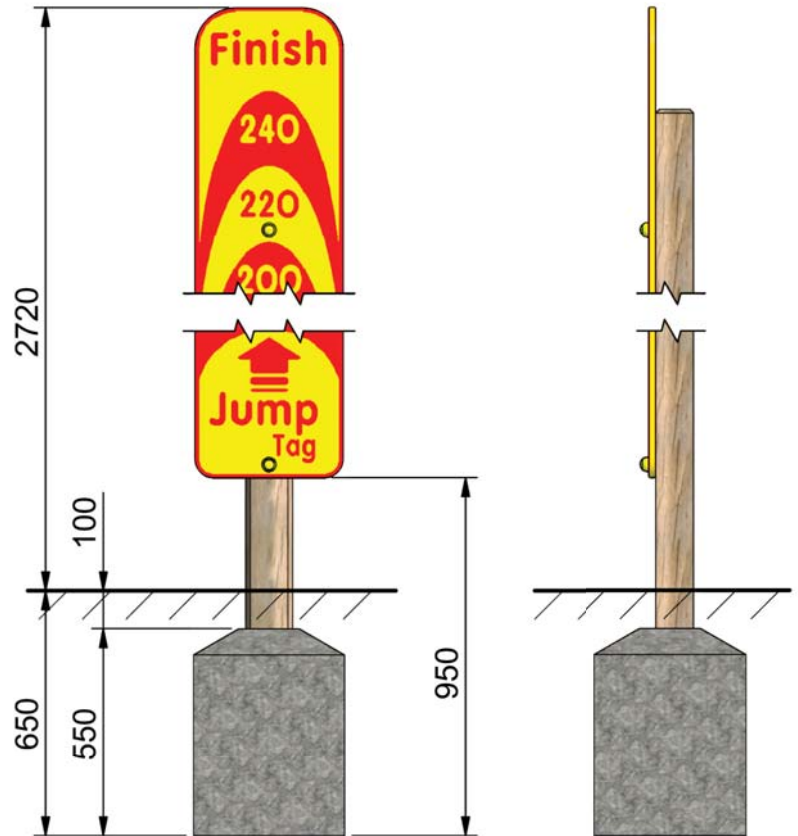
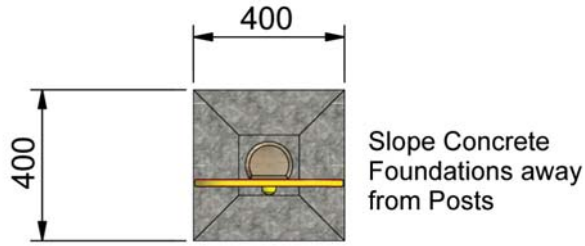


PARTS & FIXINGS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	FRTB00196	JNT24 Timber Post
2	1	FRPE00182	JNT24 HDPE Panel
3	3	M10DONUT	M10 Donut Body & Cap
4	3	M10SWASH	M10 Plain Washer
5	3	M10X70CS	M10 x 70 Coach Screw

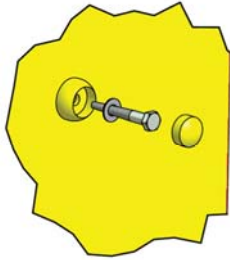

**Installation Procedure.**

1. Excavate the foundation hole as shown. When installing into loose surfaces such as sand, install the unit 100mm lower into the ground to allow for surfacing loss over time. For Bark Pit installation see FRS Data Sheet Number "BP01-IN"
2. Assemble Panel to Post as shown.
3. Position the Assembly into the foundation hole and check the post is plumb. Add concrete around posts. The top of the concrete should be 100mm below the finished surface level, see drawing.
4. Leave the concrete to set for 48 Hours.
5. Sand any rough edges or Surfaces and treat with preservative if necessary.
6. Carry out post installation inspection as per enclosed schedule sheet "PIN1"
7. this unit must be maintained in accordance with our inspection and maintenance schedule and BS1176 part 7.

<p>Woodcot Court 2A Woodcot Gardens, Farnborough Hampshire GU14 9RD Tel: 01252 515199 Fax: 01252 515858 http://www.fawns.co.uk Email: fawns@fawns.co.uk</p>	Drawing Number: <b>JNT24-IN-AY</b>					
	<del>TOLERANCES</del> General $\pm 1.0$ Hole Diameters $\pm 0.5$ Fixing Centres $\pm 0.5$ Angles $\pm 0.5$		Material: <b>See Drawing</b>			
	3rd Angle Projection		Finish: <b>Clean</b>	<b>New</b>	<b>06/01/05</b>	<b>A</b>
	Drawn By: <b>SW</b>		Scale: <b>NTS</b>	<b>CN</b>	Date	Issue
Sheet: <b>1</b> of: <b>1</b>						